

Instruktioner för reparation / utbyte av plaströr i silo

MAFA Succé BS 3xx.

- Stäng spjällen under silon.
- Demontera en av flänsarna som håller röret, bild 1.
- Ta bort det gamla röret.
- Montera samman de 2 delarna till det nya röret med en skarvhylsa och 2 slangklämmor.
OBS! Se till att slangklämmornas spännare hamnar i linje med hålen i röret.
- Stick in röret genom gavelplåten fram till slangklämman, bild 2.
Markera med en penna runt slangklämman på sidoplåten och såga eller skär bort så att rör med slangklämmor går att skjuta in i silon.
- Återmontera flänsen.

Instructions for replacement of plastic tube in

MAFA Succé BS3xx.

- Close the hatches under the silo
- Remove the flange on one side, pic 1
- Remove the old plastic tube
- Assemble the two parts of plastic tube with connection and hose clamps
- Put the tube through the hole in the side plate of the silo. Use a pen and mark the around the hose clamp on the plate. Saw or cut in the plate so that the tube with hose clamps can be pushed into the silo, pic 2.
- Remount the flange.

Utf HK
Datum 140909



Bild 1

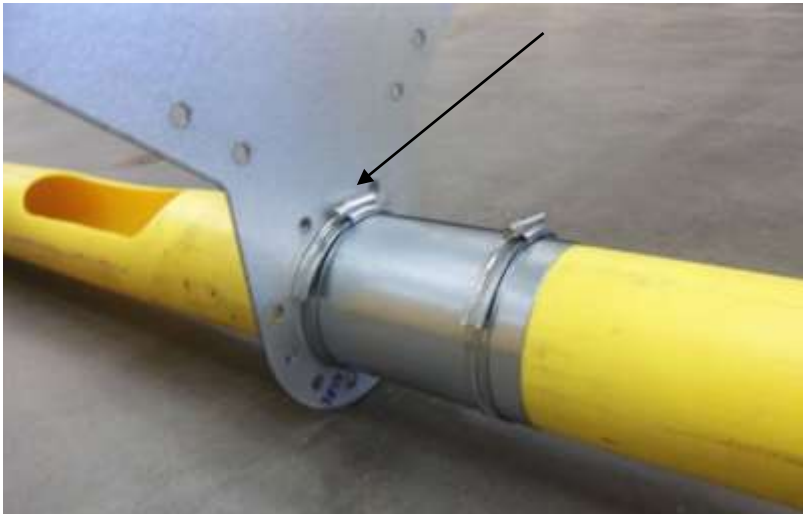


Bild 2



Bild 3

Utf HK
Datum 140909